

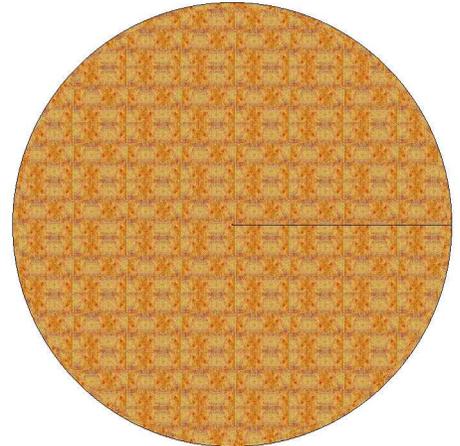
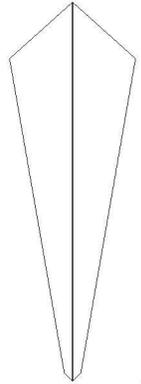
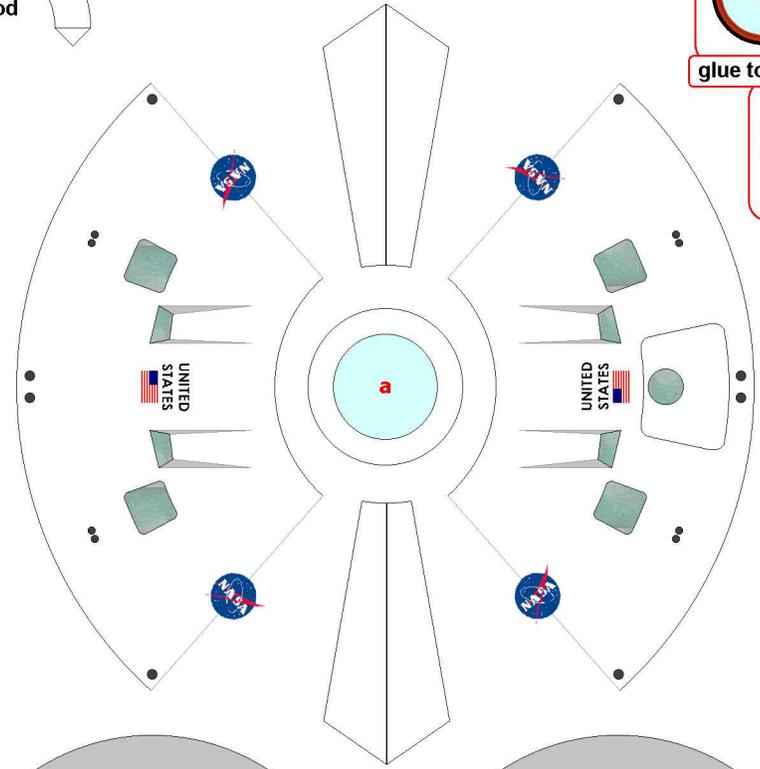
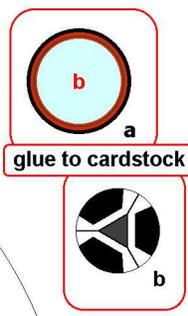




roll into cylinder and insert into capsule cover

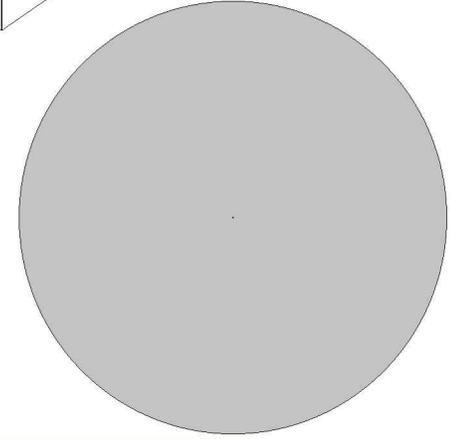

heatshield

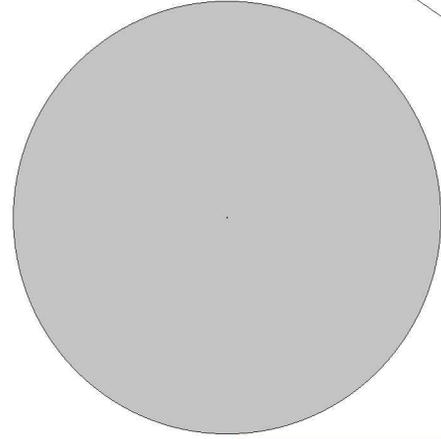

glue to cardstock and glue both disks together

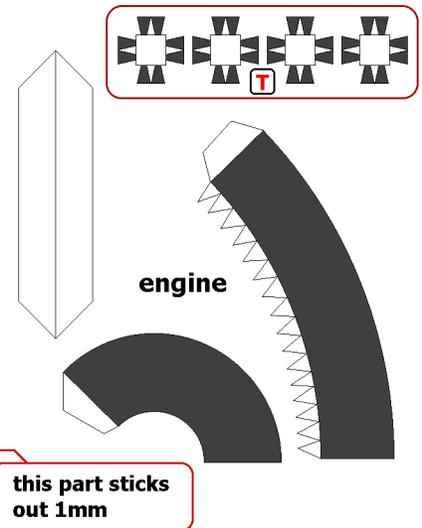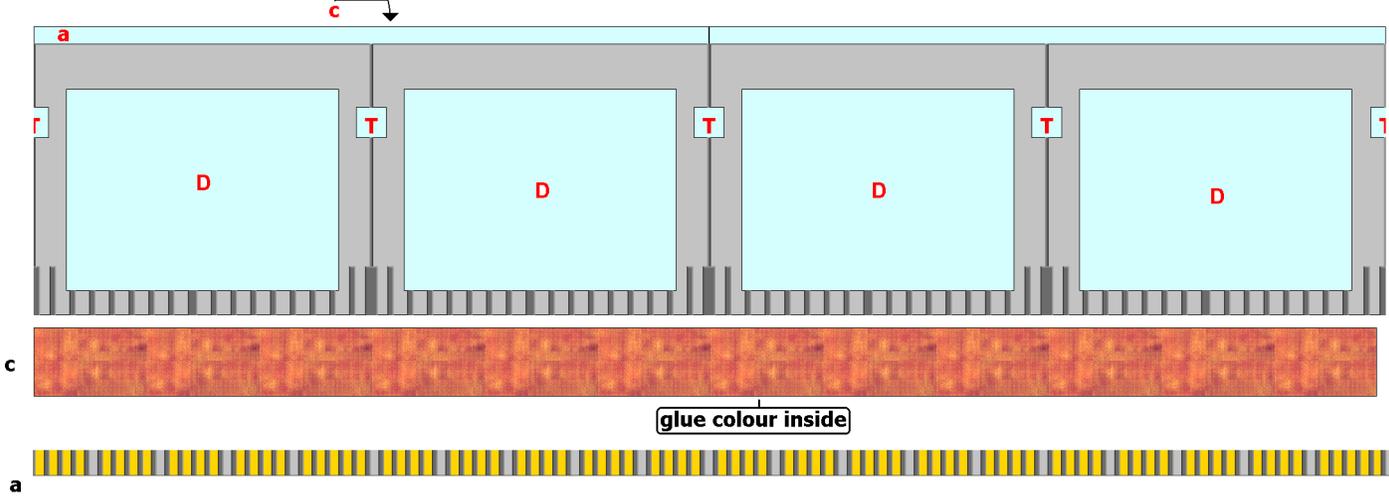

former spacer
 roll and insert (don't glue) **Service Module**

