


use leftover instrument ducting from stage 2

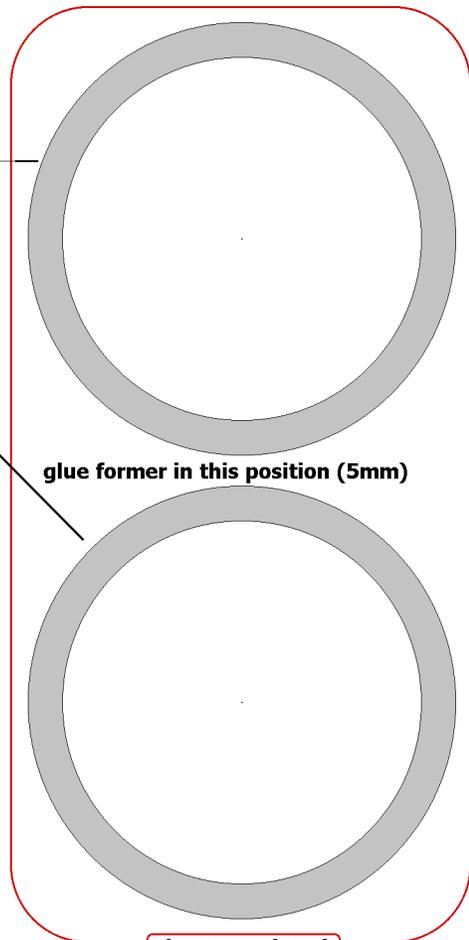



glue former in this position (5mm)

glue to cardstock




instrument duct

interstage

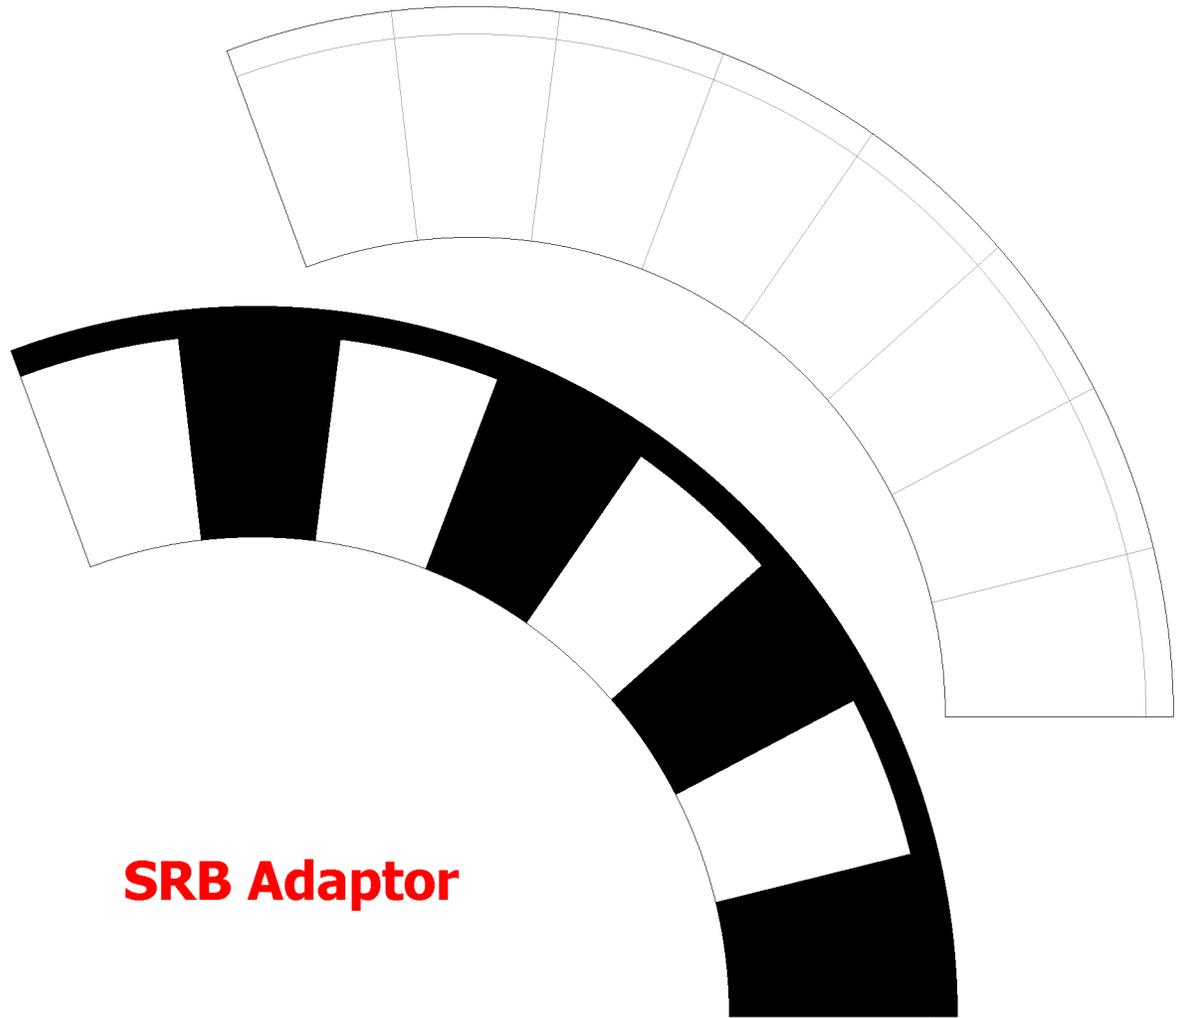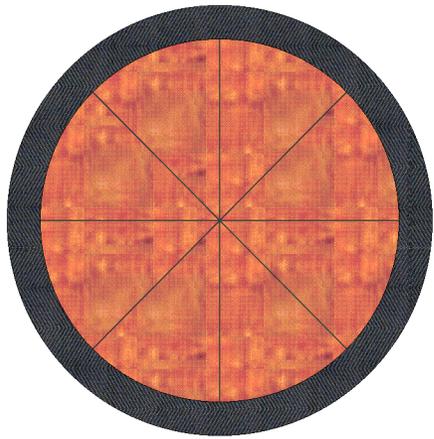

SRB Adaptor

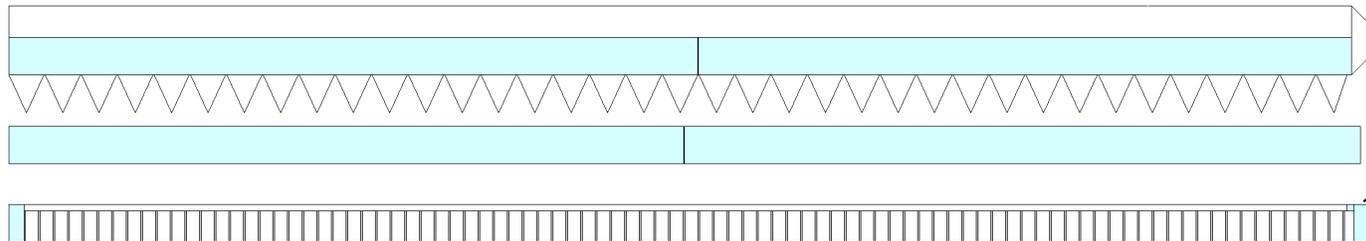

use leftover
instr.
ducting
from stage2

