



**B4**

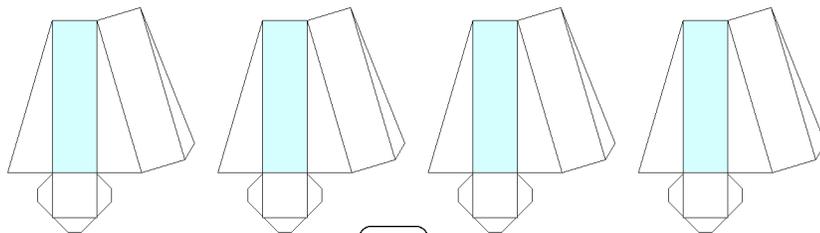

print 2X




**B3**











**B2**


**print 2X**

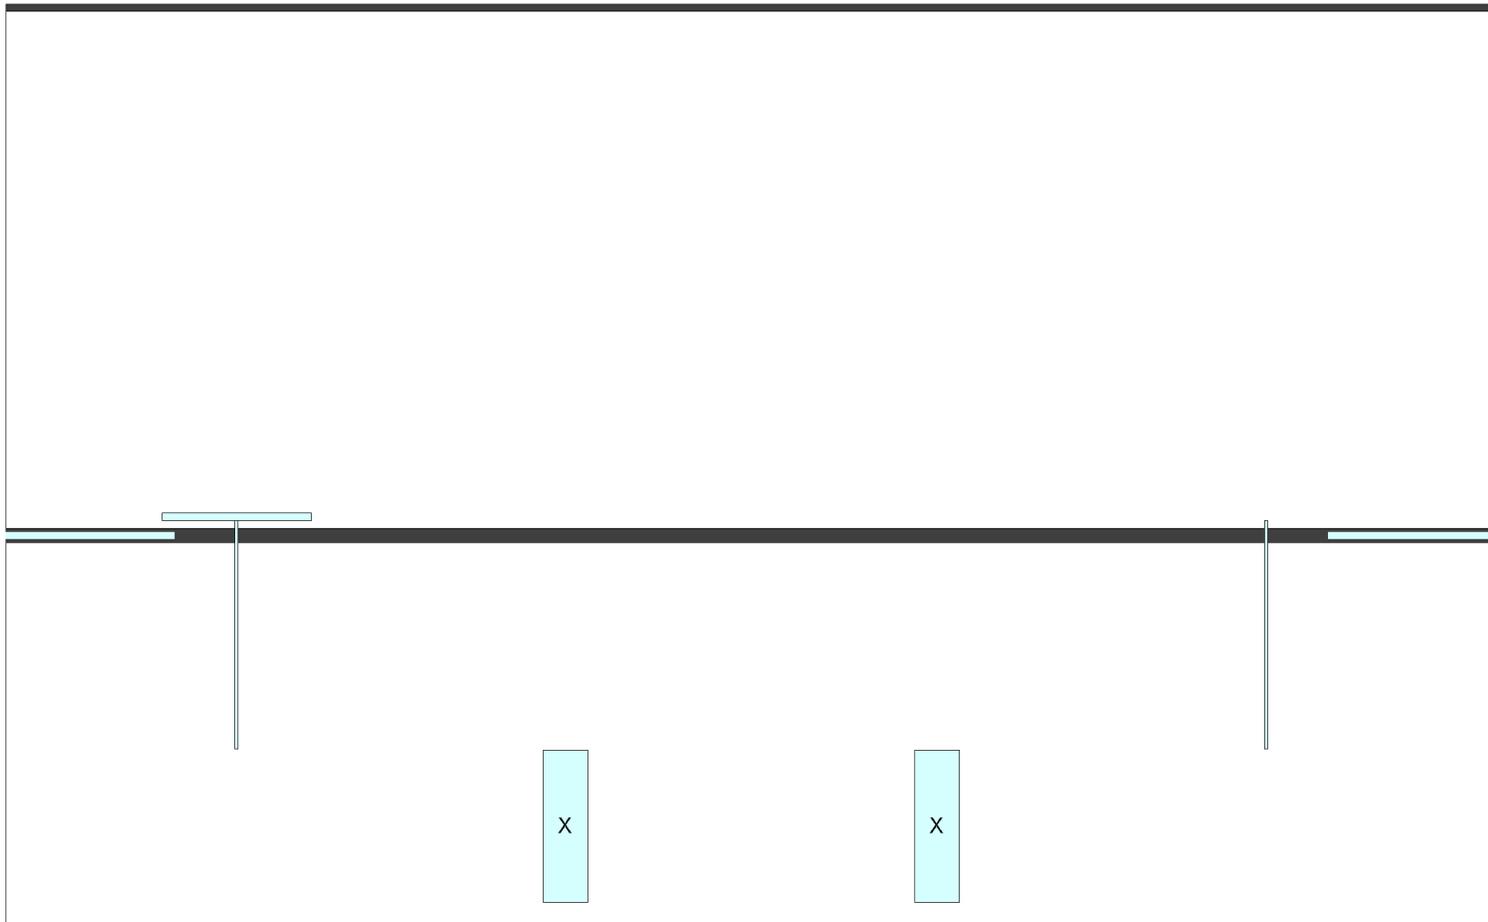

**B1**  
print 2X

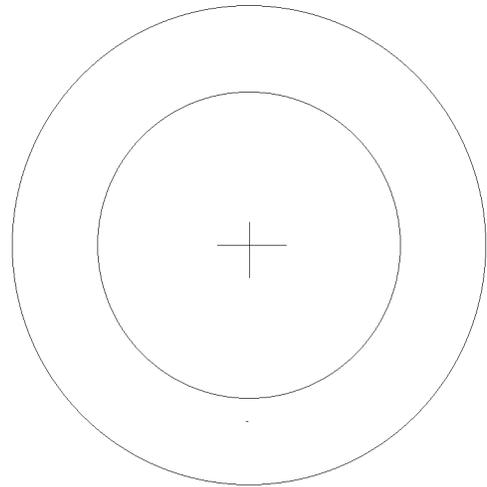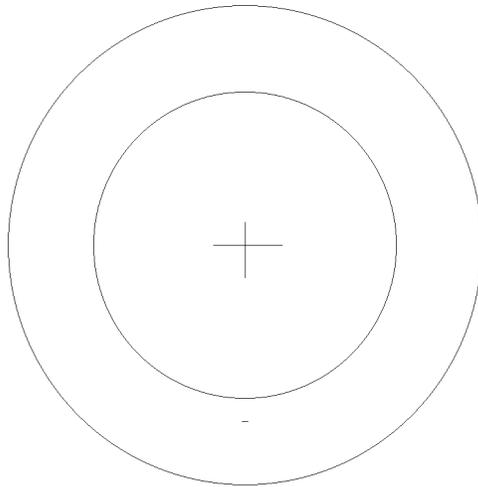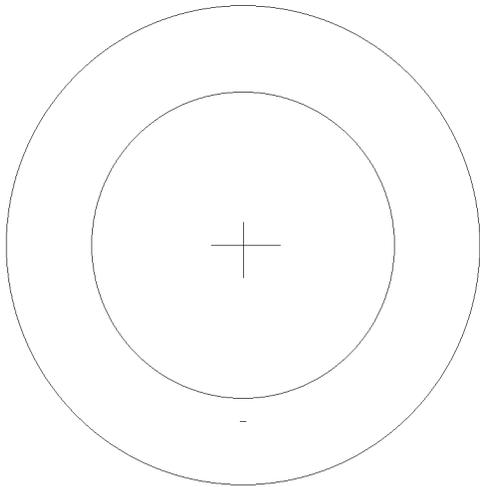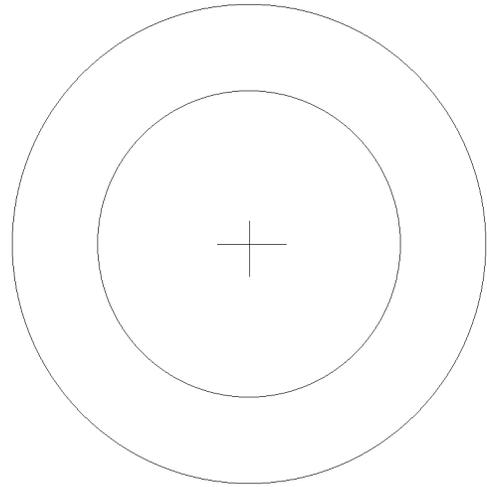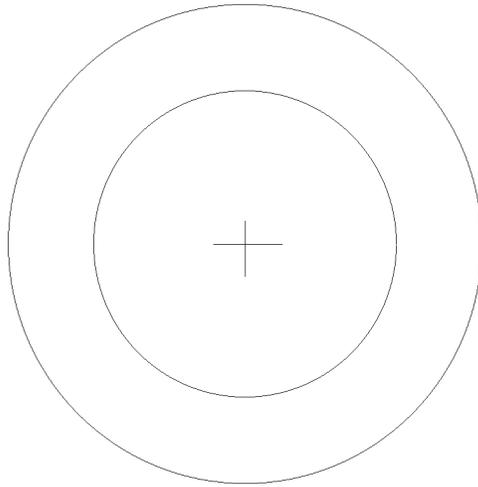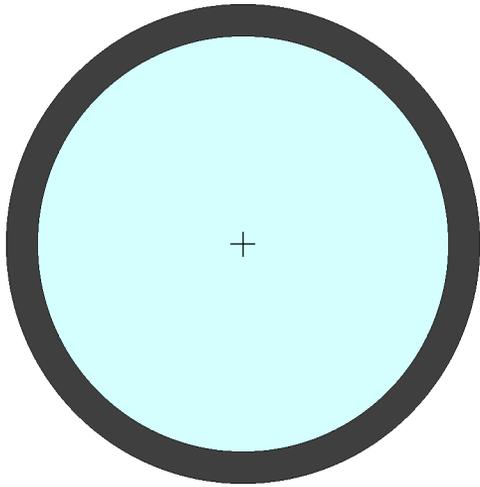

GLUE EVERYTHING ON THIS PAGE TO CARDSTOCK

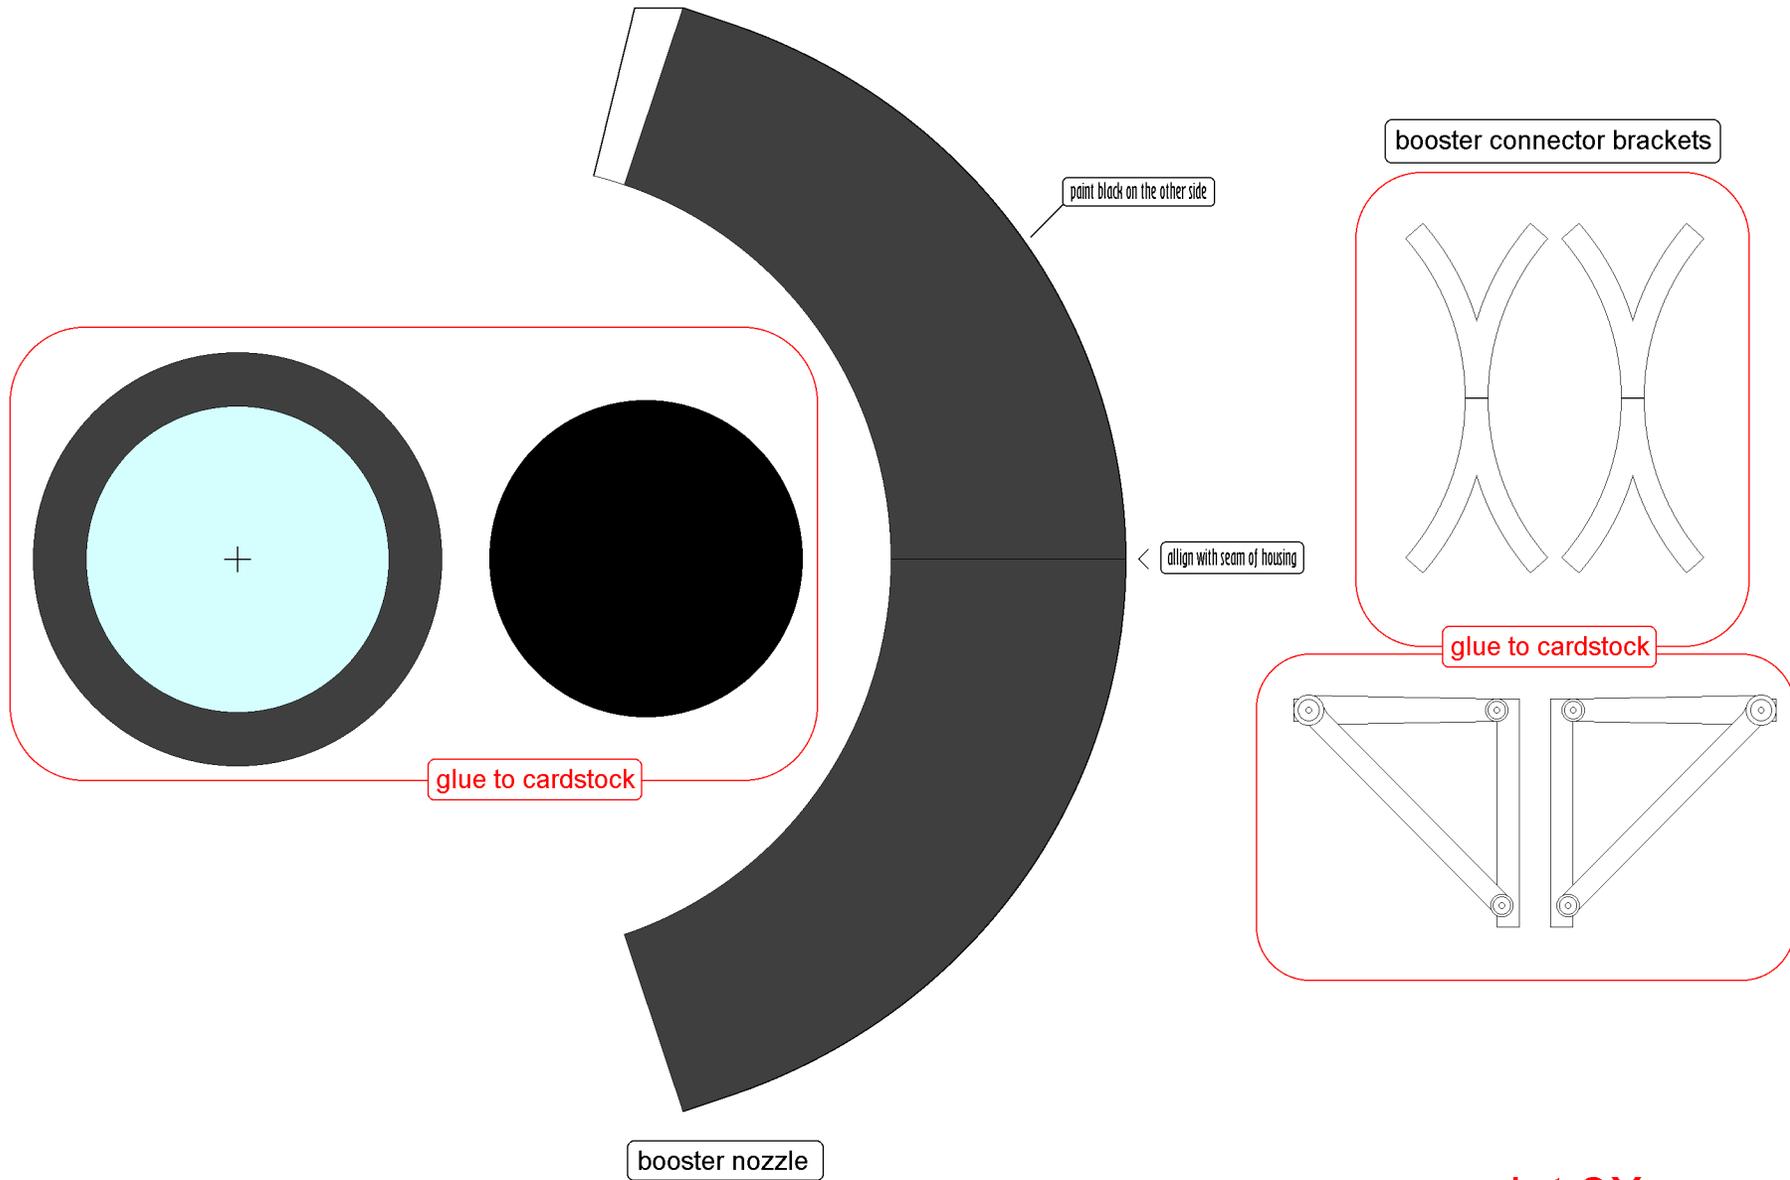

booster nozzle


booster connector brackets

paint black on the other side



align with seam of housing

glue to cardstock




glue to cardstock

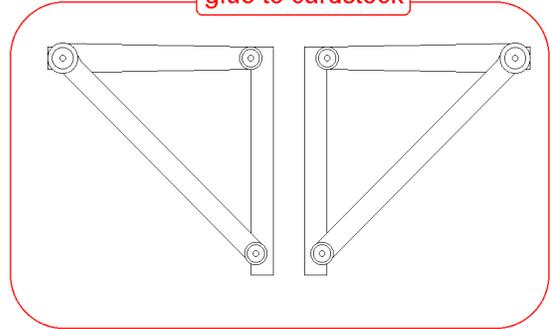



print 2X

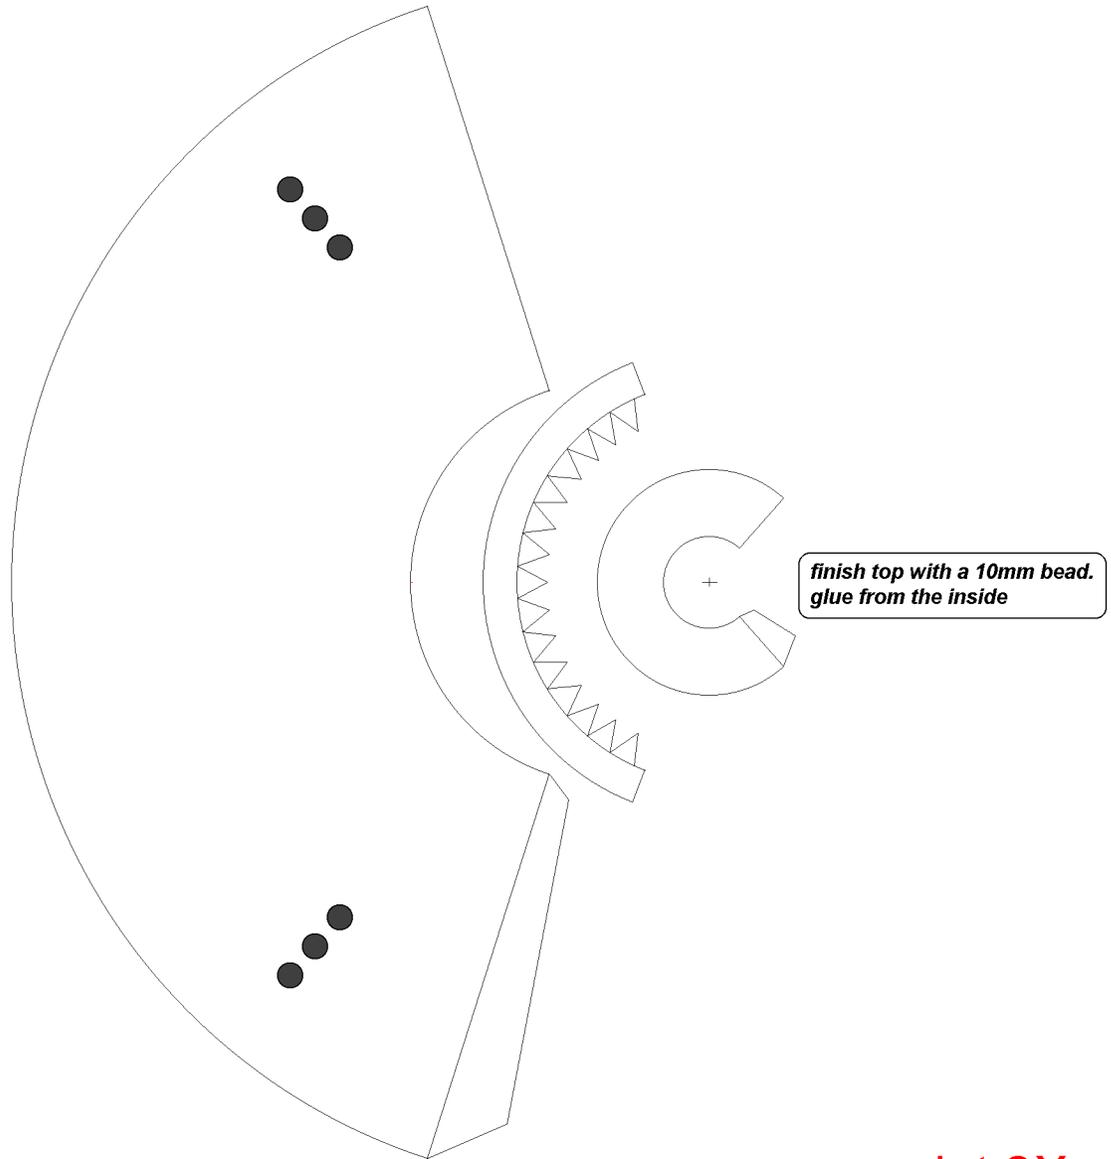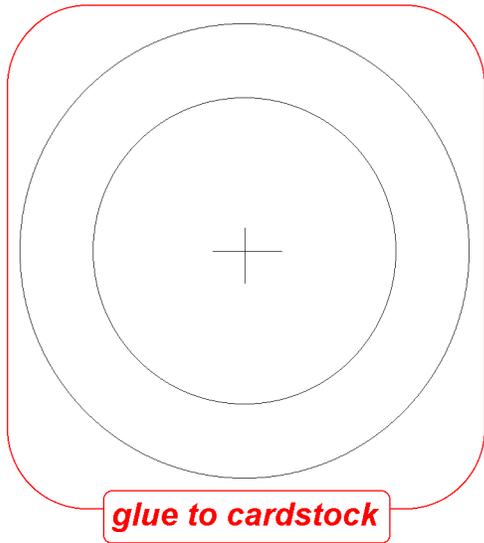

**print 2X**

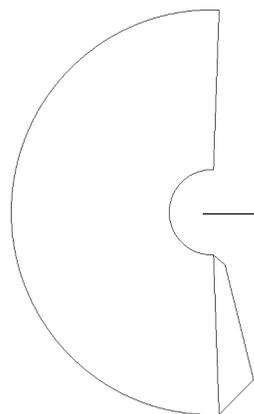
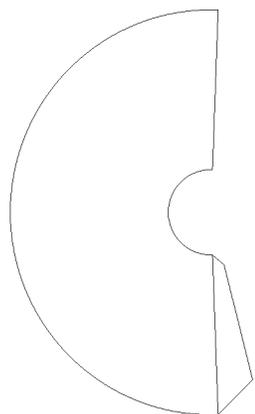
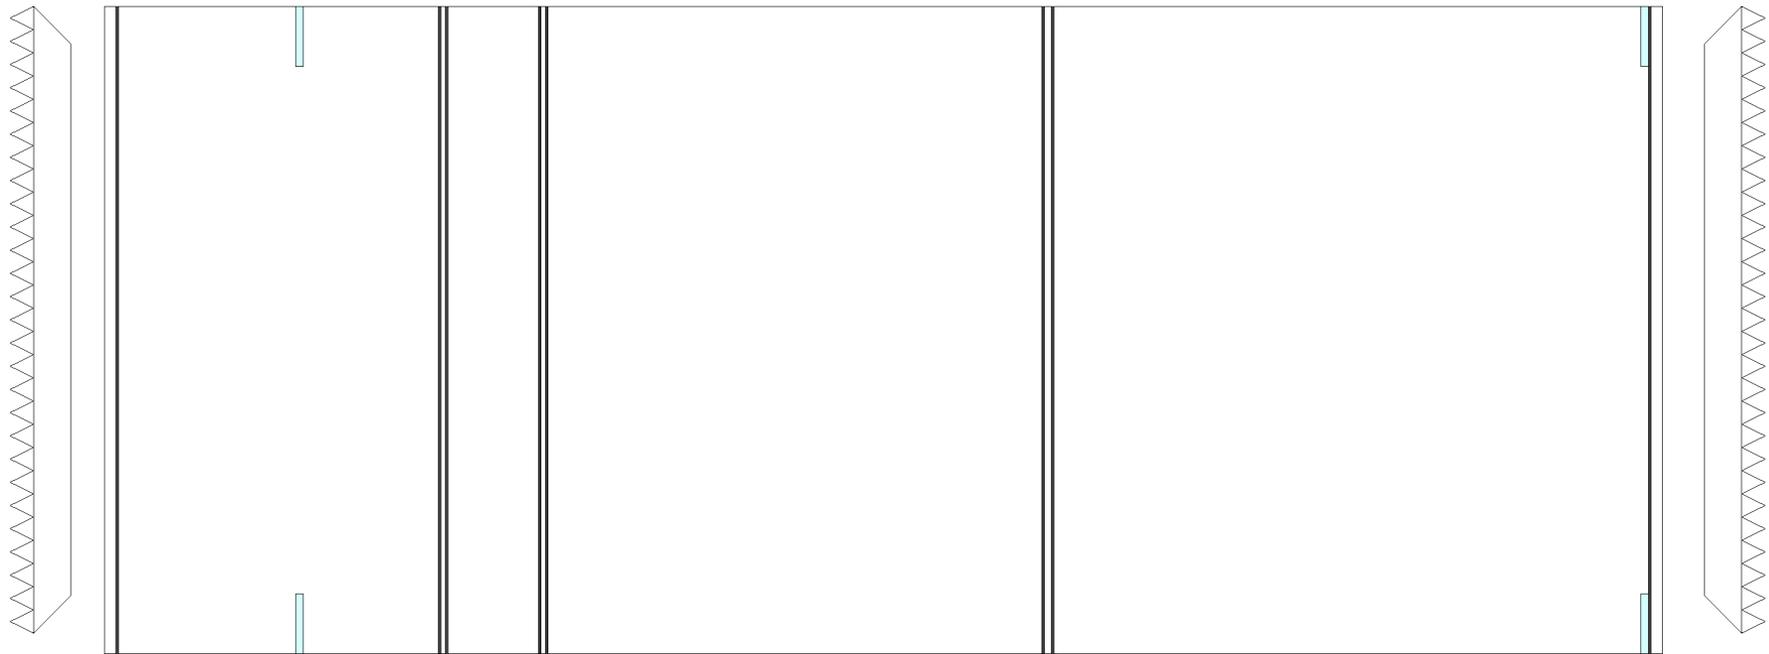


finish top with a 6mm bead glue from the inside

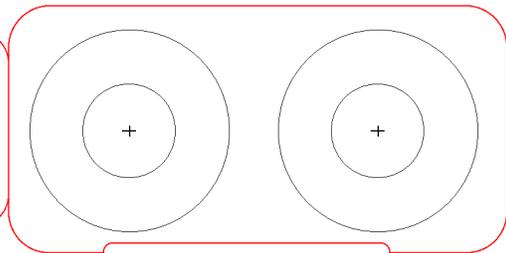
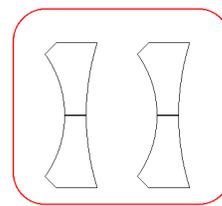


glue to cardstock

# OPTION 1

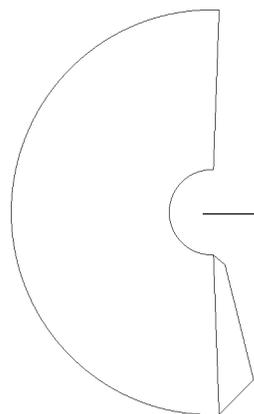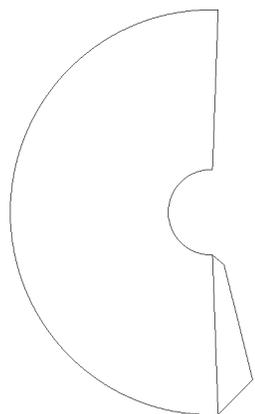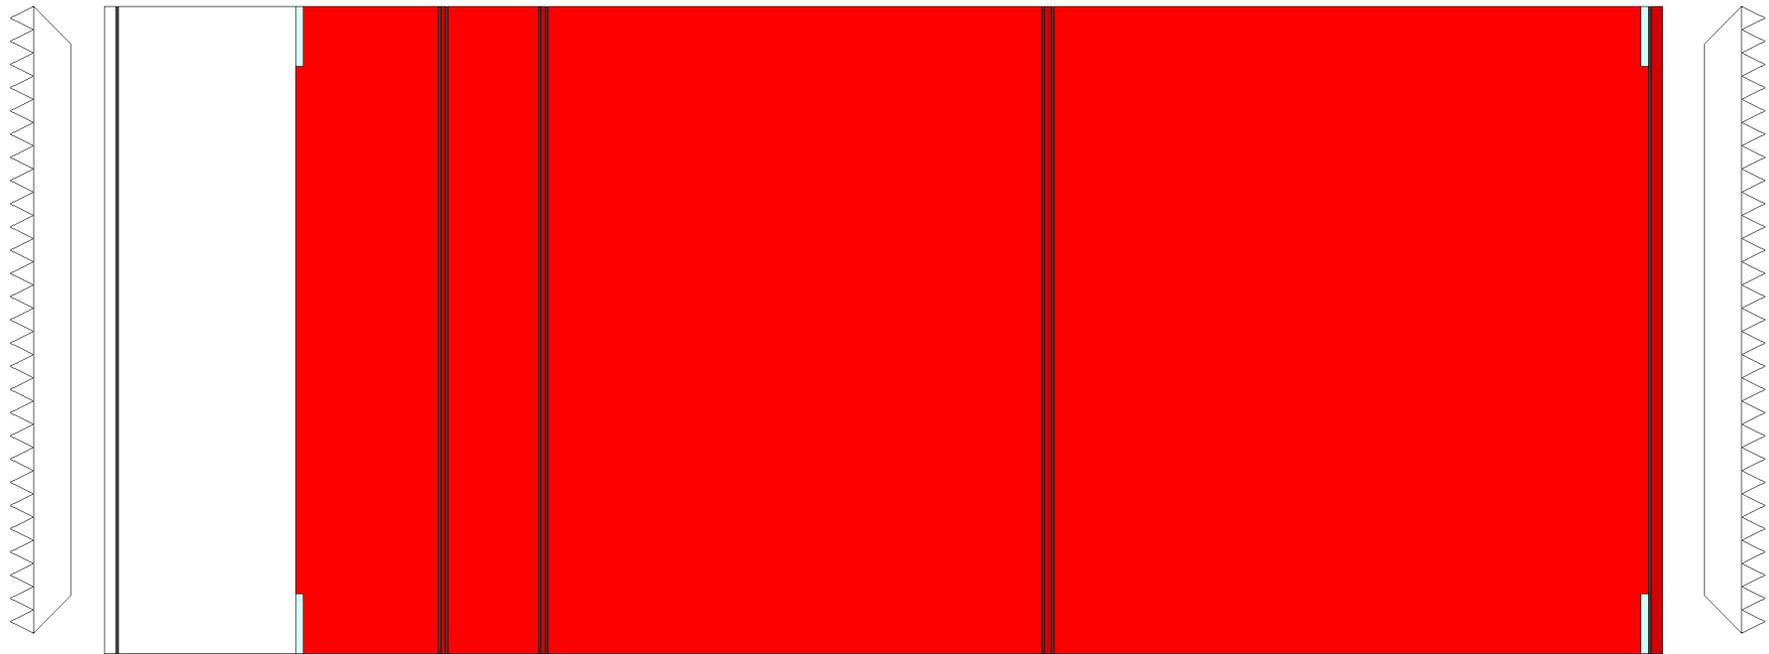

*finish top with a 6mm bead  
glue from the inside*

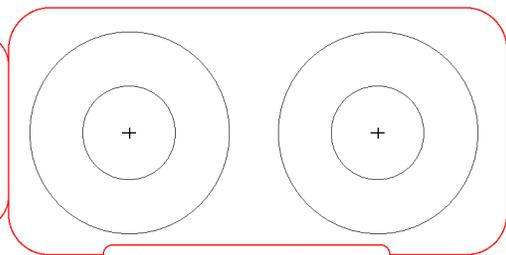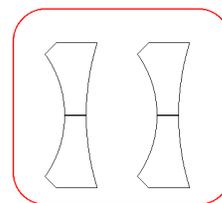

**glue to cardstock**

## **OPTION 2**